

AMPLIMESH INSECT SCREEN CARE & MAINTENANCE



Insect screens protect you from annoying bugs when your doors and windows are open in summer. With simple maintenance they will give you years of worry free service.

MAINTENANCE:

Regular care and maintenance is recommended to maintain the efficiency and longevity of your insect screens. For best results, thoroughly clean screens at least once a year, or more often in areas with high pollutants or high concentrations of sea air. In general, aluminium insect screen frames in urban areas, should be cleaned every three months and in rural areas every six months. In industrial and marine environments (within 1km of the sea), monthly cold water washing as well as six monthly washes, with warm water & detergent, is necessary.

NOTE: Insect screens are designed for insect control in your home and are not intended for the retention/security of animals or children, inside or outside your home. They are not designed for windy conditions, so windows or doors should not be left open on windy days.

CLEANING:

INSECT SCREEN: Spot cleaning on screens is best done with a vacuum cleaner using a soft brush head, removing much of the surface dirt. Use the vacuum cleaner and nozzle head to clean the screen tracks, removing dirt and debris.

- 1 - Use a vacuum cleaner or brush to remove loose dirt.
- 2 - Clean the tracks and frame with warm soapy water
- 3 - If possible remove screens for cleaning outside. Mesh cleaning is best done with a gentle rinse from the garden hose, then a gentle scrub with a soft bristle brush and warm soapy water, followed by a rinse with the hose.
- 4 - For non removable screens, rinse with a sponge and fresh water and clean as above.

DO check your mesh regularly to catch any rips or problems quickly for repairs.

DO NOT use solvents or harsh detergents on any of the insect screen parts, frame or mesh.

ALUMINIUM FRAME:

- 1 - Carefully remove any loose deposits with a wet sponge.
- 2 - Wash down using a soft brush (non abrasive) and a mild household detergent solution to remove dust, salt, dirt and other deposits.
- 3 - **Anodised** finishes with greasy deposits or hard to remove grime, should be cleaned with a soft cloth dipped in white spirit, turpentine or kerosene, then wiped with a dry rag.
- 4 - Rinse off with lots of clean fresh water.
- 5 - A quick wipe over with an absorbent cloth chamois will prevent water marks from forming.

DO NOT under any circumstances use scourer pads, abrasive scouring cleaners or caustic solution as these will cause permanent damage to the finish.

DO NOT use solvents or harsh detergents on any of the Juralco Insect Screen.

DO NOT use aggressive solvents, thinners, petrol etc, on powder coating as these solvents will attack gloss levels and reduce its life expectancy.

DO NOT let any solvents used on anodised finishes come in contact with any rubber components as they can degrade them.

DO NOT expose your anodised/powder coatings to excessive heat, heaters or hot air guns - these may damage the coating.